

Operating Instructions

Viomax CAS51D

Photometric sensor for SAC or nitrate measurement

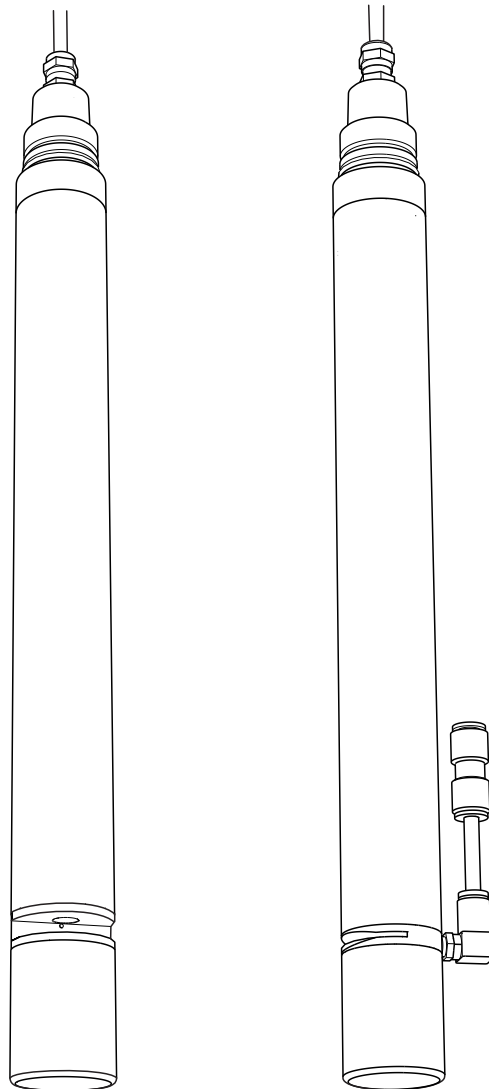





Table of contents








1	Document information	3	10	Repairs	32
1.1	Warnings	3	10.1	Return	32
1.2	Symbols used	3	10.2	Disposal	32
1.3	Symbols on the device	3	11	Accessories	33
2	Basic safety instructions	4	11.1	Assemblies	33
2.1	Requirements for personnel	4	11.2	Holder	33
2.2	Designated use	4	11.3	Compressed air cleaning	33
2.3	Occupational safety	4	11.4	Standard solutions	34
2.4	Operational safety	5	12	Technical data	35
2.5	Product safety	5	Index	38	
3	Device description	6			
3.1	Sensor design	6			
3.2	Dimensions	6			
3.3	Operating principle	8			
4	Incoming acceptance and product identification	11			
4.1	Incoming acceptance	11			
4.2	Product identification	11			
4.3	Scope of delivery	12			
4.4	Certificates and approvals	12			
5	Installation	13			
5.1	Installation conditions	13			
5.2	Mounting the sensor	14			
5.3	Immersion operation	15			
5.4	Flow operation	17			
5.5	Mounting the cleaning unit	22			
5.6	Post-installation check	23			
6	Electrical connection	24			
6.1	Connecting to the transmitter	24			
6.2	Ensuring the degree of protection	25			
6.3	Post-connection check	25			
7	Operation	26			
7.1	Calibration	26			
7.2	Cyclic cleaning	30			
8	Diagnostics and troubleshooting ...	30			
9	Maintenance	31			
9.1	Maintenance intervals	31			
9.2	Cleaning the sensor	31			
9.3	Maintenance of optical filters and strobe lamp	31			

1 Document information


1.1 Warnings

Structure of information	Meaning
 DANGER Causes (/consequences) Consequences of non-compliance (if applicable) ► Corrective action	This symbol alerts you to a dangerous situation. Failure to avoid the dangerous situation will result in a fatal or serious injury.
 WARNING Causes (/consequences) Consequences of non-compliance (if applicable) ► Corrective action	This symbol alerts you to a dangerous situation. Failure to avoid the dangerous situation can result in a fatal or serious injury.
 CAUTION Causes (/consequences) Consequences of non-compliance (if applicable) ► Corrective action	This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in minor or more serious injuries.
NOTICE Cause/situation Consequences of non-compliance (if applicable) ► Action/note	This symbol alerts you to situations which may result in damage to property.

1.2 Symbols used

Symbol	Meaning
	Additional information, tips
	Permitted or recommended
	Not permitted or not recommended
	Reference to device documentation
	Reference to page
	Reference to graphic
	Result of a step


1.3 Symbols on the device

Symbol	Meaning
	Reference to device documentation

2 Basic safety instructions

2.1 Requirements for personnel

- Installation, commissioning, operation and maintenance of the measuring system may be carried out only by specially trained technical personnel.
- The technical personnel must be authorized by the plant operator to carry out the specified activities.
- The electrical connection may be performed only by an electrical technician.
- The technical personnel must have read and understood these Operating Instructions and must follow the instructions contained therein.
- Measuring point faults may be repaired only by authorized and specially trained personnel.

 Repairs not described in the Operating Instructions provided may only be carried out directly by the manufacturer or by the service organization.

2.2 Designated use

CAS51D is a photometric sensor for SAC or nitrate measurement in liquid media.

The sensor is particularly suited for use in the following applications:

- Monitoring and regulating water treatment plants
- Monitoring surface waters

SAC measurement

- Organic load in WWTP inlet
- Organic load WWTP outlet
- Discharger monitoring
- Organic load in drinking water

Nitrate measurement

- Nitrate measurement in naturally bodies of water
- Monitoring nitrate content in WWTP outlet
- Monitoring nitrate content in aeration basins
- Monitoring and optimizing denitrification phases

Use of the device for any purpose other than that described, poses a threat to the safety of people and of the entire measuring system and is therefore not permitted.

The manufacturer is not liable for damage caused by improper or non-designated use.

2.3 Occupational safety

CAUTION

UV light

UV light can damage the eyes

- ▶ Never look into the cuvette gap while the sensor is in operation.

As the user, you are responsible for complying with the following safety conditions:

- Installation guidelines
- Local standards and regulations

Electromagnetic compatibility

- The product has been tested for electromagnetic compatibility in accordance with the applicable European standards for industrial applications.
- The electromagnetic compatibility indicated applies only to a product that has been connected in accordance with these Operating Instructions.

2.4 Operational safety

1. Before commissioning the complete measuring point, verify that all connections are correct. Ensure that electrical cables and hose connections are undamaged.
2. Do not operate damaged products, and protect them against unintentional operation. Label the damaged product as defective.
3. If faults cannot be rectified, products must be taken out of service and protected against unintentional operation.

2.5 Product safety

The product is designed to meet state-of-the-art safety requirements, has been tested, and left the factory in a condition in which it is safe to operate. The relevant regulations and European standards have been observed.

3 Device description

3.1 Sensor design


The sensor is designed as a 40 mm sensor that can be operated directly and completely in the process without the need for further sampling (in situ). One version of the sensor measures the amount of nitrate in the medium while another version measures the SAC value of the medium.

The sensor comprises the following assemblies:

- Power supply
- High-voltage generation for the strobe lamp,
- Photometer cuvette
 - central component in which the measuring light interacts with the medium.
- Detectors,
 - detect the measuring signals, digitize them and process them to form a measured value.
- Controller,
 - responsible for controlling internal sensor processes and transmitting data.


All data - including the calibration data - are stored in the sensor. The sensor can be precalibrated and used at a measuring point, calibrated externally, or used for several measuring points with different calibrations.

3.2 Dimensions

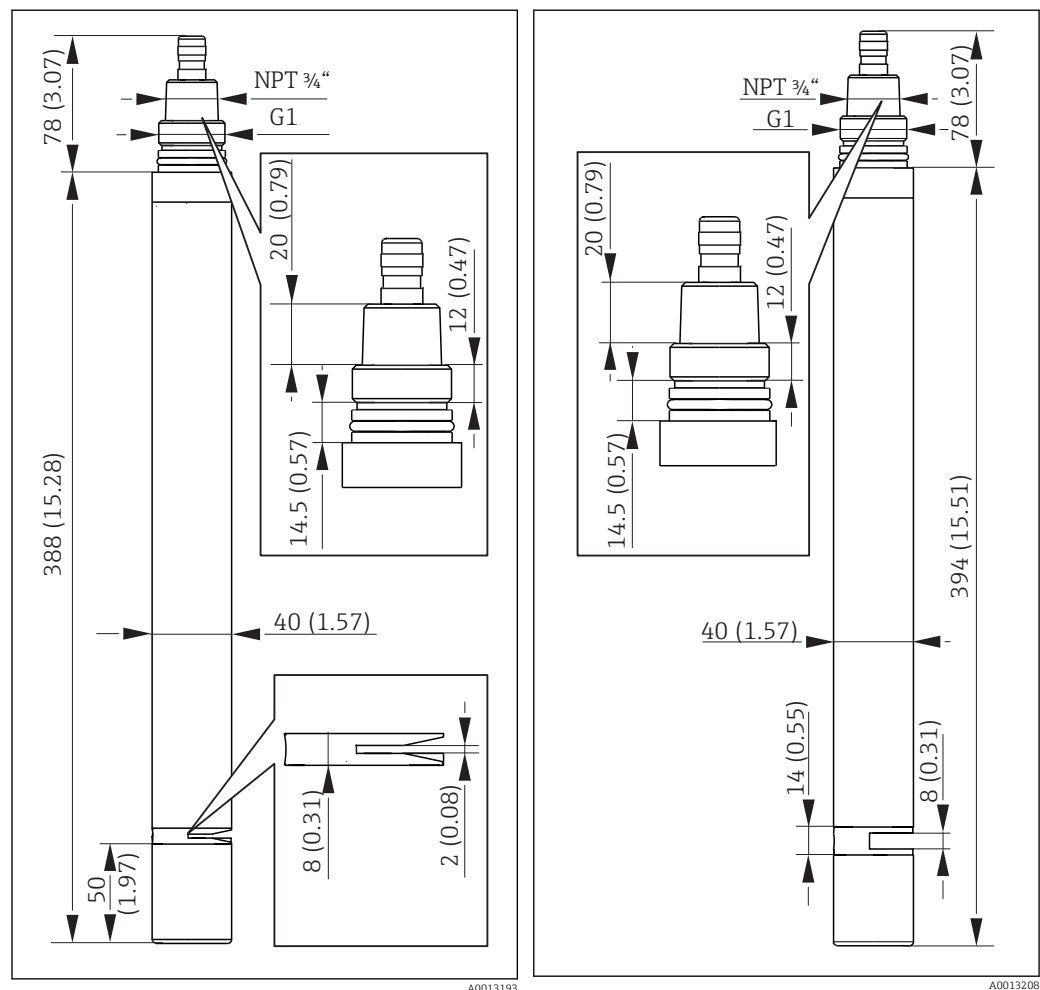

1 Sensor with 2 mm gap width, dimensions in mm (inch)

2 Sensor with 8 mm gap width, dimensions in mm (inch)

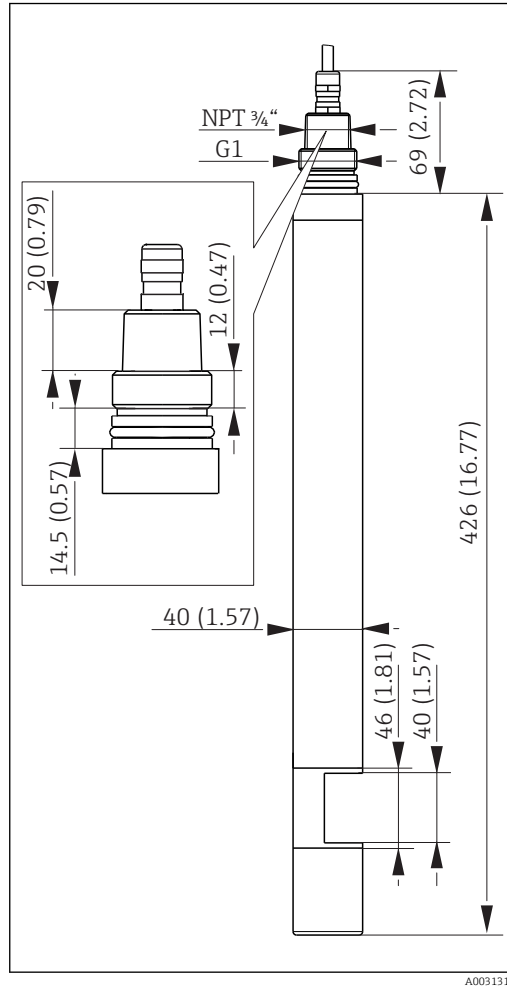


A0031311

3 Sensor with 40 mm gap width, dimensions in mm (inch)

3.3 Operating principle

3.3.1 Measuring principle

The light from a pulsed, high-stability strobe lamp (item 3) passes through the measurement section ¹⁾ (item 2). A beam splitter (item 6) directs the light beam to the two receivers (items 1 and 5). A filter upstream from the receivers only lets through light in the measuring wavelength or reference wavelength.

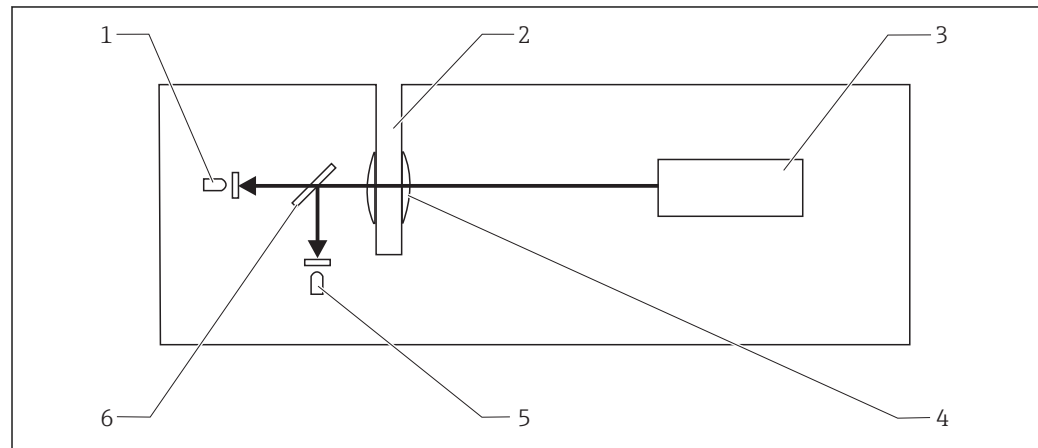

4 Measuring principle of nitrate sensor

- 1 Measuring receiver with filter
- 2 Cuvette gap
- 3 Strobe lamp
- 4 Lens
- 5 Reference receiver with filter
- 6 Beam splitter

Within the measurement section, the medium in the cuvette (water, dissolved substances and particles) absorbs light across the entire spectrum. In the measuring wavelength range, the measured component ²⁾ takes an additional part of its energy from the light.

The ratio of the light signal of the measuring wavelength to the light signal of the reference wavelength is used to calculate the measured value.

- If only water and turbidity are present, both signals are attenuated to the same degree and the ratio remains constant.
- If the medium contains the measured component, the signal of the measuring wavelength is attenuated more and the ratio changes.

This change in the ratio can be converted to determine the nitrate concentration or the SAC value. This dependency is non-linear.

Conclusion:

- Long measurement sections are required for low concentrations of the measured component.
For clear water measurements, this is achieved with the 8 mm cuvette for nitrate measurement and the 40 mm cuvette for SAC measurement.
- For high turbidity values, longer measurement sections result in the total absorption of light - the measured values are no longer valid.
For media with high turbidity values (activated sludge applications), the nitrate sensor with the 2 mm cuvette returns good, reliable measured values.
The SAC sensor with the 2 mm cuvette is ideal for measuring the organic load in the inlet of municipal wastewater treatment plants.

1) Measurement section = open path through cuvette

2) Nitrate or substances that contribute to the spectral absorption coefficient (SAC)

3.3.2 Nitrate measurement

The sensor is designed for measuring nitrate. As nitrite is also measured, it could also be regarded as an NO_x sensor.

Nitrate ions absorb UV light in the range of approx. 190 to 230 nm. Nitrite ions have a similar absorption rate in the same range.

The sensor measures the light intensity of the 214 nm wavelength (measuring channel). At this wavelength, nitrate and nitrite ions absorb light in proportion to their concentration, while the light intensity in the reference channel remains virtually unchanged at 254 nm.

Interference factors, such as turbidity, fouling or organic hydrocarbons, are factored out mathematically.

The signal ratio between the reference wavelength and measurement wavelength constitutes the measurement result. This ratio is converted to the concentration of nitrate using the calibration curve programmed into the sensor.

3.3.3 Cross-interference when measuring nitrate

The following have a direct impact on the measuring range:

- Total solids (TS) and turbidity
- Sludge properties
- Nitrite

Trends:

- A higher proportion of TS or greater turbidity reduces the upper end of the measuring range, resulting in a smaller measuring range.
- High COD³⁾ levels reduce the upper end of the measuring range, resulting in a smaller measuring range.
- Nitrite is measured as nitrate, thus resulting in a higher measured value.

The following can be deduced from the interdependencies cited above:

- Sludge floc causes scattering in the medium, resulting in the attenuation of both the measuring and reference signal to varying degrees. This in turn can bring about a change in the nitrate value due to turbidity.
- High concentrations of oxidizable substances⁴⁾ in the medium may result in an increase in the measured value.
- Nitrite absorbs light in a similar wavelength range to nitrate and is measured along with nitrate. The dependency is constant: 1.0 mg/l nitrite is displayed as 0.8 mg/l nitrate.
- An adjustment to the customer process is always worthwhile.

3.3.4 SAC measurement

Many organic substances absorb light in the range of 254 nm. In the SAC sensor, absorption on the measuring wavelength (254 nm) is compared with the largely unaffected reference measurement at 550 nm.

KHP (potassium hydrogen phthalate C₈H₅KO₄) is the established organic reference in SAC measurement operations. That is why the sensor is calibrated in the factory using KHP.

The SAC value can be regarded as a trend indicator of the organic load in a medium. For this purpose, it is converted to COD, TOC, BOD and DOC⁵⁾ using predefined, adjustable factors:

$$c(\text{TOC}) = 0.4705 * c(\text{KHP})$$

$$c(\text{COD}) = 1.176 * c(\text{KHP})$$

$$c(\text{BOD}) = 1.176 * c(\text{KHP})$$

$$c(\text{DOC}) = 0.4705 * c(\text{KHP})$$

3) COD = Chemical Oxygen Demand

4) Specified as COD. Corresponds to the quantity of oxygen that would be required to oxidize the substances if oxygen were the oxidizing agent.

5) Chemical Oxygen Demand (COD), Total Organic Carbon (TOC), Biochemical Oxygen Demand (BOD), Dissolved Organic Carbon (DOC)

The ratio to SAC (based on KHP) is calculated as follows:

$$1/m = 1.487 \text{ mg/l COD} = 1.487 \text{ mg/l BOD} = 0.595 \text{ mg/l TOC} = 0.595 \text{ mg/l DOC}$$

Many components that absorb light at 254 nm deviate significantly from KHP in terms of their absorption behavior. For this reason, an adjustment to the customer process is worthwhile.

3.3.5 Cross-interference when measuring SAC

The following have a direct impact on the measuring range:

- COD
- Color

Trends:

- Oxidizable substances, absorbing at 550 nm, distort the measurement result. In instances of this nature, a comparison or calibration is necessary.
- Coloration that absorbs in the green spectral range increases the measured value.
- Oxidizable substances with different spectral properties to KHP (potassium hydrogen phthalate) distort the measurement result. In instances of this nature, a comparison or adjustment is necessary.

4 Incoming acceptance and product identification

4.1 Incoming acceptance

1. Verify that the packaging is undamaged.
 - ↳ Notify your supplier of any damage to the packaging.
Keep the damaged packaging until the matter has been settled.
2. Verify that the contents are undamaged.
 - ↳ Notify your supplier of any damage to the delivery contents.
Keep the damaged products until the matter has been settled.
3. Check the delivery for completeness.
 - ↳ Check it against the delivery papers and your order.
4. Pack the product for storage and transportation in such a way that it is protected against impact and moisture.
 - ↳ The original packaging offers the best protection.
The permitted ambient conditions must be observed (see "Technical data").

If you have any questions, please contact your supplier or your local sales center.

4.2 Product identification

4.2.1 Nameplate

The nameplate provides you with the following information on your device:

- Manufacturer identification
 - Extended order code
 - Serial number
 - Safety information and warnings
- Compare the data on the nameplate with your order.

4.2.2 Product identification

Product page

www.endress.com/cas51d

Interpreting the order code

The order code and serial number of your product can be found in the following locations:

- On the nameplate
- In the delivery papers

Obtaining information on the product

1. Go to the product page for your product on the Internet.
2. At the bottom of the page, click the link **Online Tools** and then select **Access device specific information**.
 - ↳ An additional window opens.
3. Enter the order code from the nameplate into the search field and then select **Show details**.
 - ↳ You will receive information on each feature (selected option) of the order code.

Manufacturer's address

Endress+Hauser Conducta GmbH+Co. KG
Dieselstraße 24
D-70839 Gerlingen

4.3 Scope of delivery

The delivery comprises:

- Sensor in the version ordered
- Operating Instructions

4.4 Certificates and approvals**4.4.1 CE**

The product meets the requirements of the harmonized European standards. As such, it complies with the legal specifications of the EU directives. The manufacturer confirms successful testing of the product by affixing to it the **CE** mark.

4.4.2 EAC version

The product has been certified according to guidelines TP TC 004/2011 and TP TC 020/2011 which apply in the European Economic Area (EEA). The EAC conformity mark is affixed to the product.


5 Installation

5.1 Installation conditions

5.1.1 Mounting location

- ▶ Choose a mounting location that can be easily accessed at a later stage.
- ▶ Ensure that upright posts and fittings are fully secured and vibration-free.
- ▶ Select an installation location that produces a typical nitrate concentration / a typical SAC value for the application in question.
- ▶ Do not install the sensor above aeration discs. Oxygen bubbles may accumulate at the cuvette gap and distort the measured value.


5.1.2 Orientation

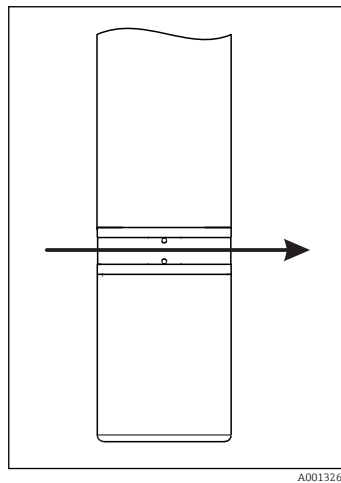

- ▶ Align the sensor so that the cuvette gap is rinsed by means of the flow.

5 Sensor orientation, arrow = direction of flow


Flexdip CYA112 wastewater assembly and Flexdip CYH112 bracket

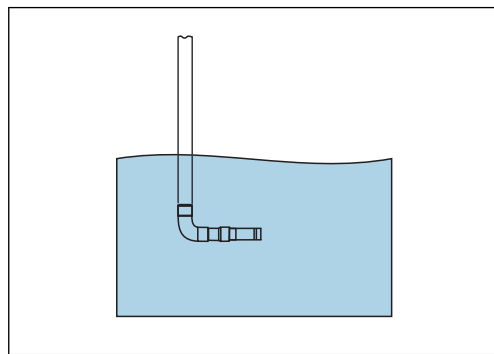

6 Horizontal, fixed installation

The installation angle is 90°.

- ▶ Align the sensor in such a way that the cuvette gap is rinsed by means of the flow.

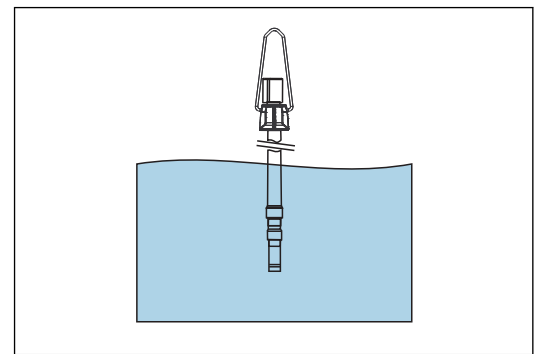


7 Suspended vertically from a chain

The installation angle is 0°. Tried and tested arrangement when operating in ventilated zones.

- ▶ Ensure that the sensor is adequately cleaned. There must be no buildup on the optical windows.

Flow assembly CAS5 1D 2-40 mm for small sample volumes

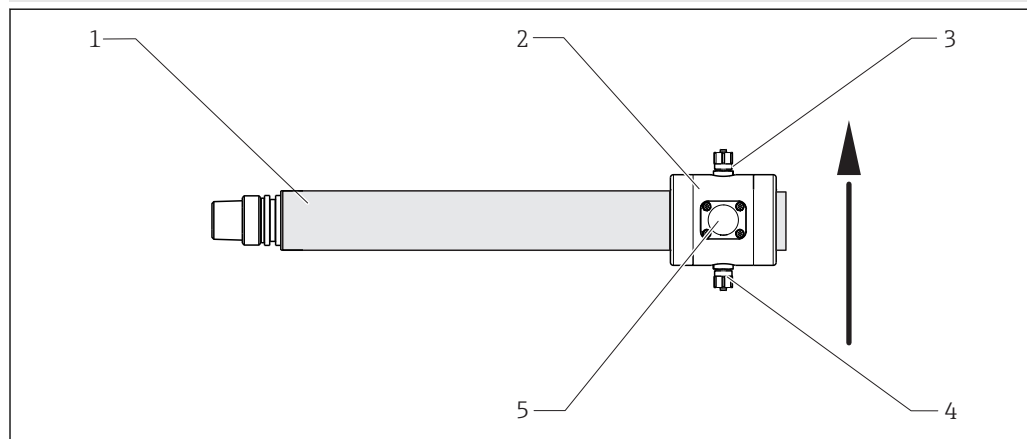


A0013266

8 Horizontally, in flow assembly, arrow points in the direction of flow

- 1 Sensor
- 2 Flow assembly
- 3 Medium outlet
- 4 Medium inflow
- 5 Window, required for aligning the sensor

Flowfit CYA251 flow assembly

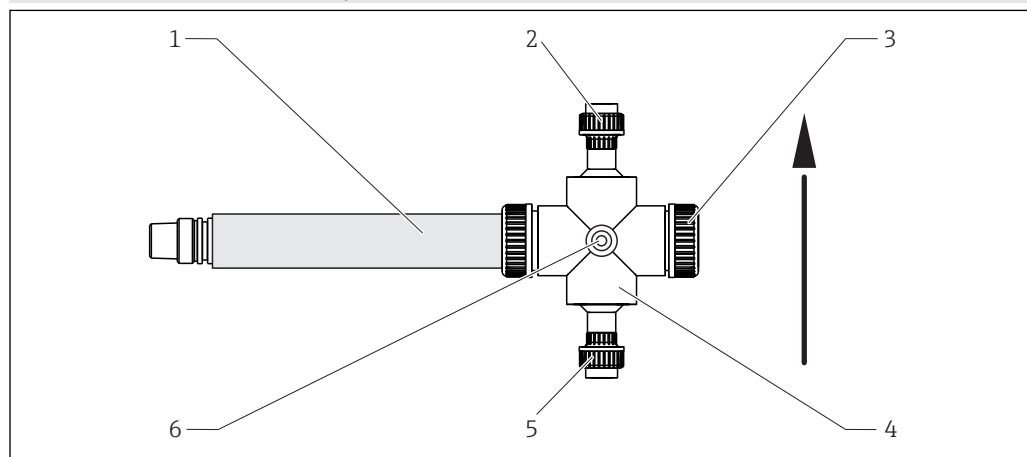

A0032901

9 Horizontally, in flow assembly CYA251, arrow points in the direction of flow

- 1 Sensor
- 2 Medium outlet
- 3 Cap
- 4 Flow assembly
- 5 Medium inflow
- 6 Rinse connection

5.2 Mounting the sensor



5.2.1 Installation instructions

To ensure correct measurement, the windows in the cuvette must be free from any sedimentation. The best way to ensure this is through the use of a cleaning unit (accessory) operated by compressed air.

- For horizontal orientations:
Mount the sensor in such a way that the cuvette gap is located at the side.

5.3 Immersion operation

5.3.1 Fixed installation with wastewater assembly

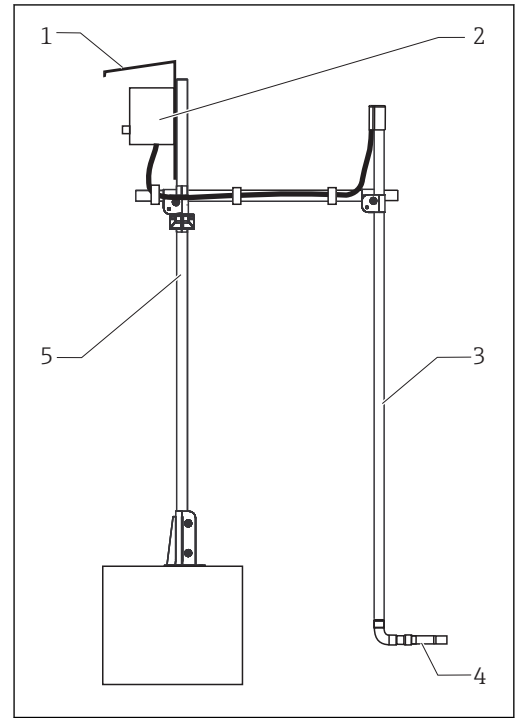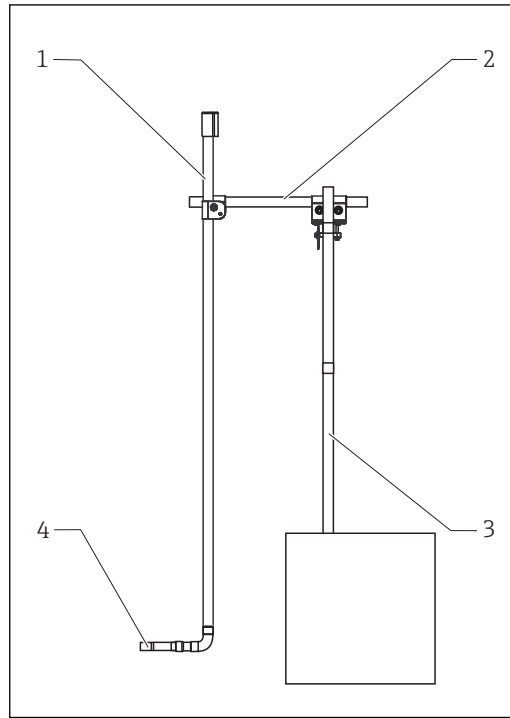

10 Installation secured on railing


- 1 Wastewater assembly Flexdip CYA112
- 2 Flexdip CYH112 holder
- 3 Rail
- 4 Viomax CAS51D

11 Installation with upright post

- 1 Protective cover
- 2 Liquiline CM44x multi-channel transmitter
- 3 Wastewater assembly Flexdip CYA112
- 4 Viomax CAS51D
- 5 Flexdip CYH112 holder

This type of installation is particularly suitable for strong or turbulent medium flow (>0.5 m/s (1.6 ft/s)) in basins or channels. A cleaning unit (accessory) operated by compressed air significantly extends the maintenance intervals for the sensor.


5.3.2 Installation with chain retainer

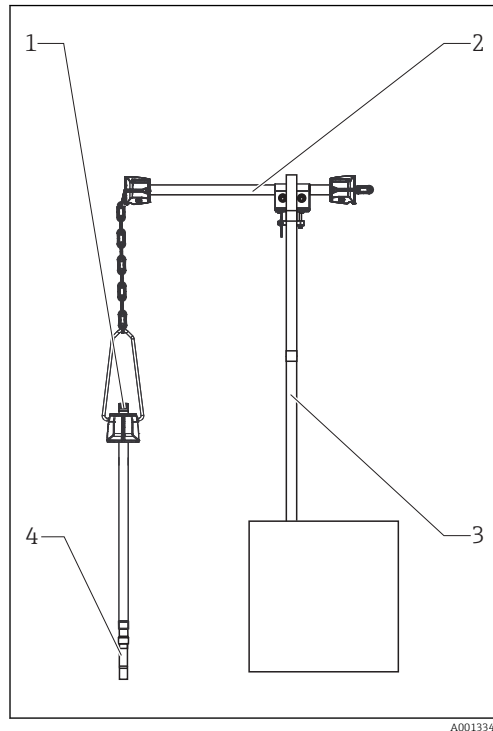

A0013348

12 Chain retainer on railing

- 1 Wastewater assembly Flexdip CYA112
- 2 Flexdip CYH112 holder
- 3 Rail
- 4 Viomax CAS5 1D

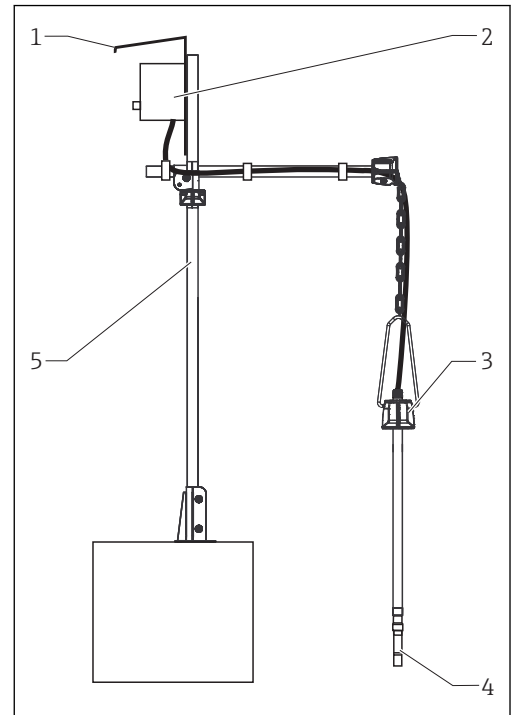

A0013351

13 Chain retainer on upright post


- 1 Protective cover
- 2 Liquiline CM44x multi-channel transmitter
- 3 Wastewater assembly Flexdip CYA112
- 4 Viomax CAS5 1D
- 5 Flexdip CYH112 holder

The chain retainer is particularly suitable for applications that require a sufficient distance between the mounting location and the edge of the aeration basin. As the assembly is freely suspended, any vibration of the upright post is practically ruled out.

The swinging movement of the chain retainer enhances the self-cleaning effect of the optics. A cleaning unit (accessory) operated by compressed air significantly extends the maintenance intervals for the sensor.

5.4 Flow operation

5.4.1 Flow assembly for clear water and small sample volumes

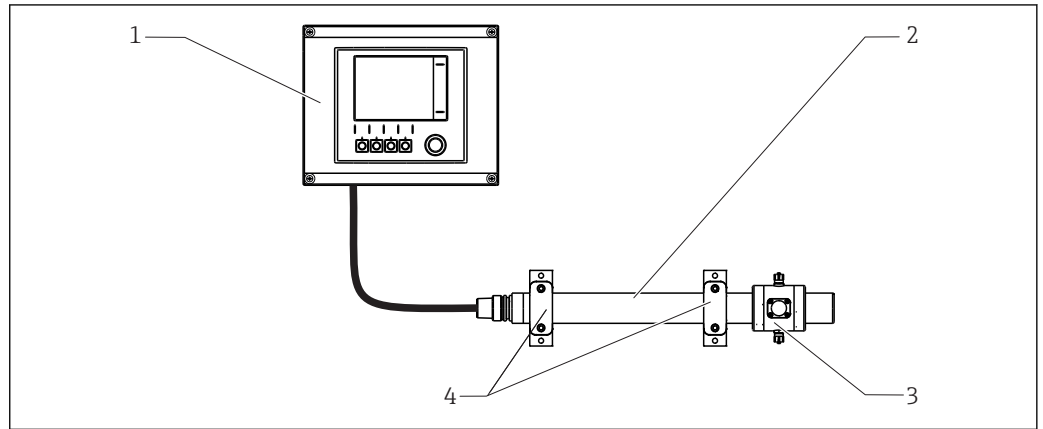


A0013352

14 Sensor with flow assembly

- 1 Transmitter
- 2 Viomax CAS51D
- 3 Flow assembly
- 4 Sensor holder

Secure holder

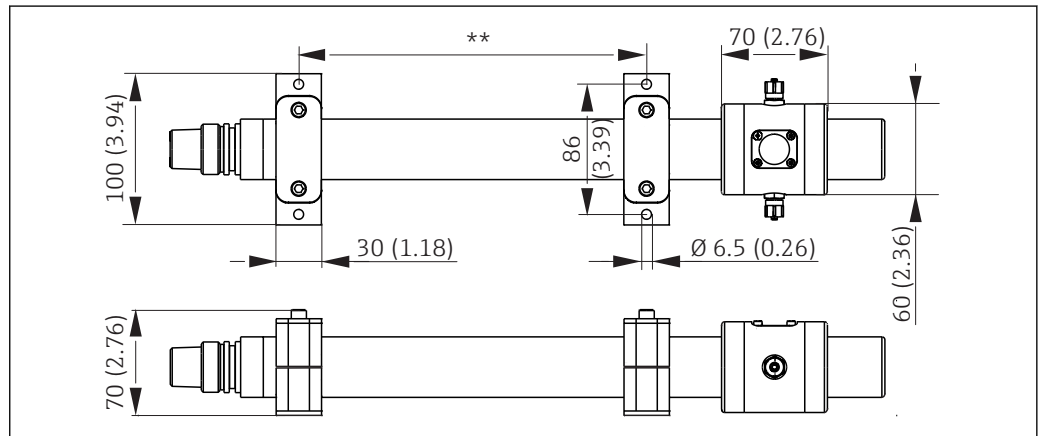


A0013290


15 Dimensions in mm (inch)

** Variable length

1. For the necessary installation dimensions, refer to the drawing. Mount the sensor in a horizontal position (as shown in the drawing).
Drill the holes for the mounting clamps into a wall or panel.
2. Secure the mounting clamps. The required fastening fixtures (screws, wall plugs) are not included in the scope of delivery of the kit and must be provided by the customer.

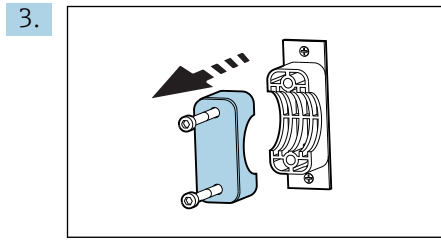


Release the hexagonal nuts on the mounting clamps and remove the top part of the clamp.

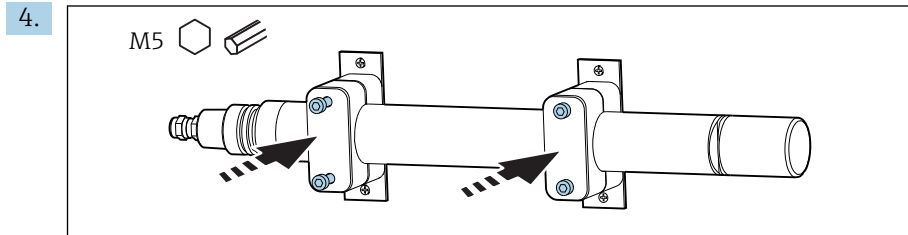


Position the sensor in the mounting clamps and screw on the top parts, tightening by hand (it should still be possible to move the sensor).

Mount the flow assembly

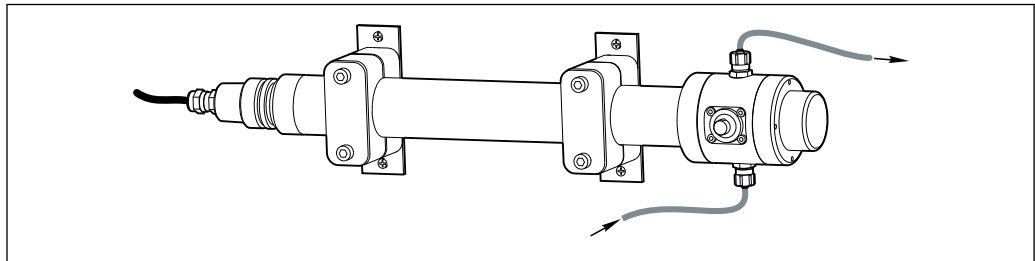


A0033056

16 Sensor installed in flow assembly

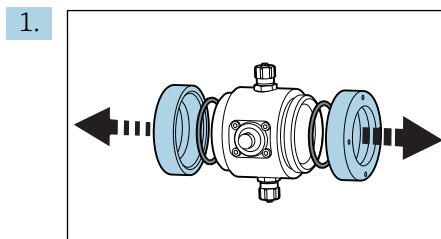


Release the threaded rings on the flow assembly and remove both O-rings.


2. Check if the silicone grease provided with the kit is permitted for use in your application. If not, use a grease that is suitable for your application. Lubricate the O-rings.

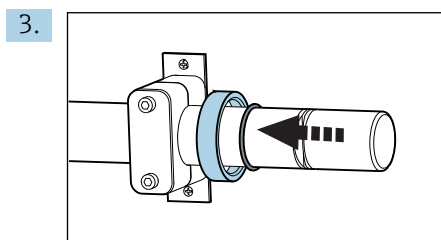


First slide a threaded ring (thread in the direction of the assembly) onto the sensor, followed by an O-ring .

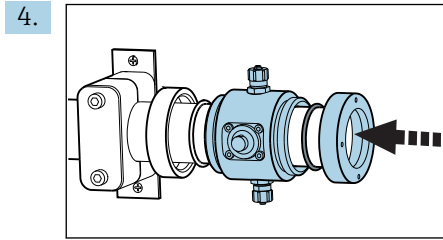


Now slide the assembly onto the sensor, followed by the second O-ring and the second threaded ring.

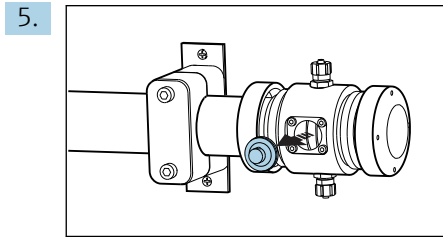


Open the cap on the viewing window.

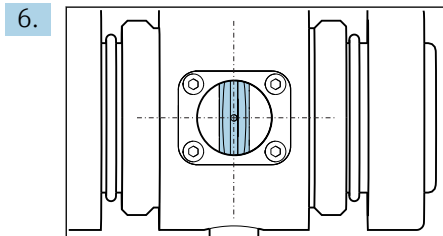

Position the assembly on the sensor in such a way that the cuvette gap is visible in the center of the window.

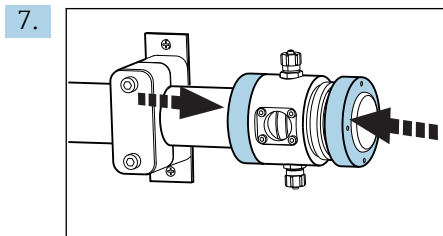


Tighten both threaded rings. Ensure that the assembly cannot change position.

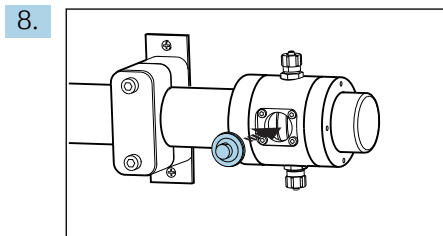

The cuvette gap must still be visible in the center of the viewing window:
Close the viewing window again with the cap.

- ↳ To guard against loss:
Secure the viewing window to one of the hose connections (no diagram) using the transparent cord.

Connection diagram

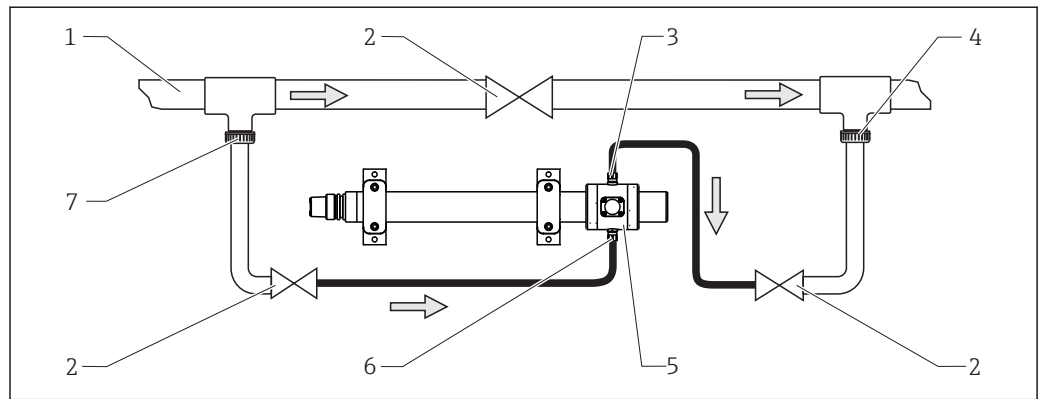

A0013361


- | | | | |
|---|--------------------------------------|---|----------------|
| 1 | Main pipe | 5 | Flow assembly |
| 2 | Manually actuated or solenoid valves | 6 | Medium inflow |
| 3 | Medium outlet | 7 | Medium removal |
| 4 | Medium return | | |

► Connect the medium inflow and outlet to the assembly's hose connections as shown in the diagram.

↳ This fills the assembly from below and ensures that the assembly is self-venting.

There must be a minimum flow rate of 100 ml/h (0.026 gal/h). Increased response times must be taken into account.

As an alternative to bypass operation, you can also direct the sample flow from a filter unit with an open outlet through the assembly:

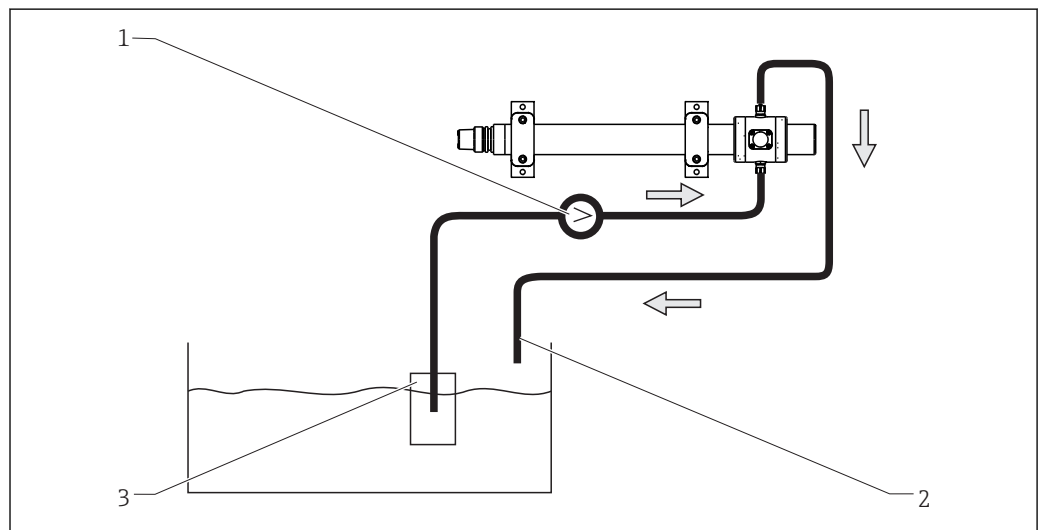


A0013434

17 Flow assembly with open outlet

- | | |
|---|-------------|
| 1 | Pump |
| 2 | Open outlet |
| 3 | Filter unit |


5.4.2 Flow assembly Flowfit CYA251

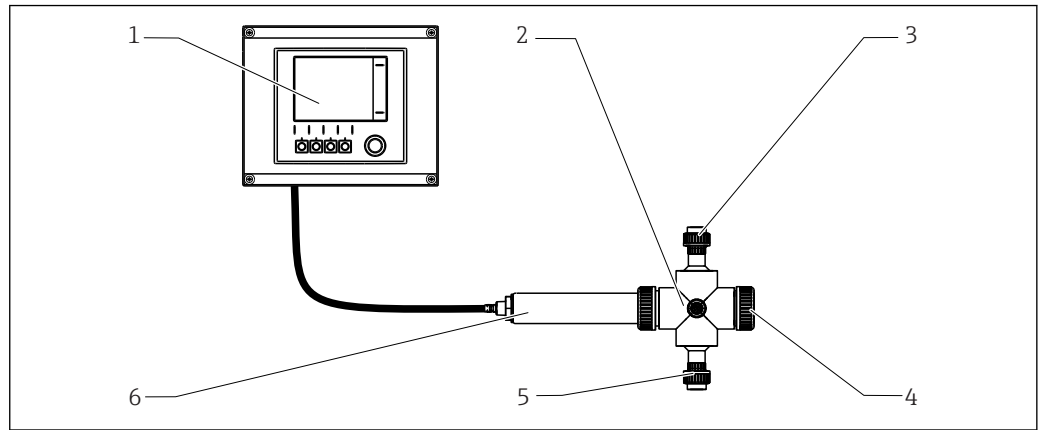

A0032917

18 Measuring system with CYA251

- 1 Transmitter
- 2 Flow assembly
- 3 Medium outlet
- 4 Cap
- 5 Medium inflow
- 6 Viomax CAS51D

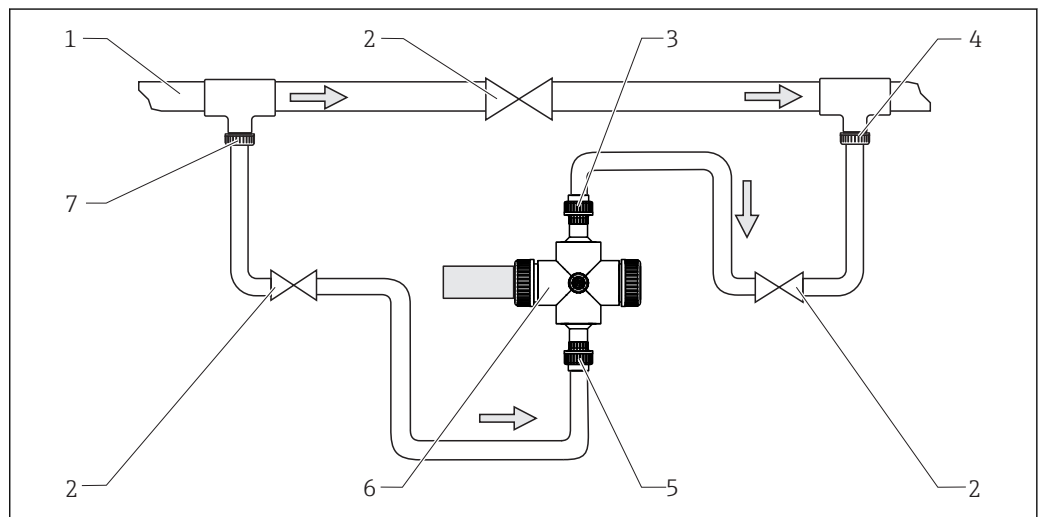

A0032920


19 Connection diagram

- 1 Main pipe
- 2 Manually actuated or solenoid valves
- 3 Medium outlet
- 4 Medium return
- 5 Medium inflow
- 6 Flow assembly
- 7 Medium removal

 Mount the sensor in the assembly in accordance with its Operating Instructions (BA00495C).

There must be a minimum flow rate of 100 ml/h (0.026 gal/h). Increased response times must be taken into account.

As an alternative to bypass operation, you can also direct the sample flow from a filter unit with an open outlet through the assembly:

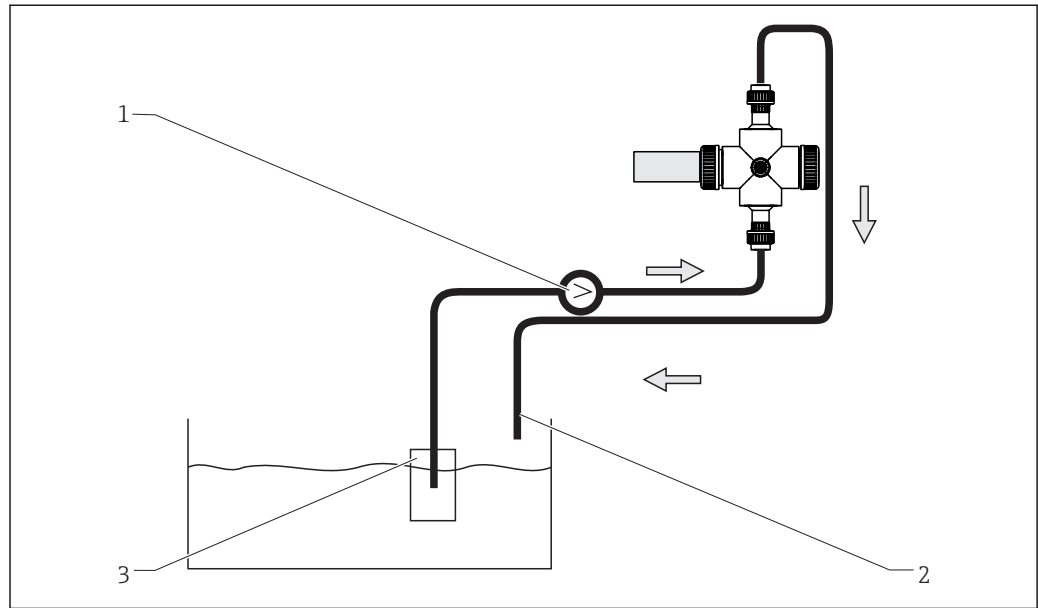

A0032921


20 Flow assembly with open outlet

- 1 Pump
- 2 Open outlet
- 3 Filter unit


5.5 Mounting the cleaning unit

Sensors with gap width of 2 mm or 8 mm

Mount the compressed air cleaning unit prior to installing the sensor in the measuring point, or remove the sensor from the medium. Clean the sensor if necessary.

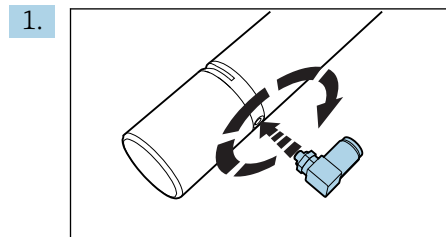

Screw the elbow plug from the accessory kit into the mounting hole behind the sensor gap, and tighten by hand as far as it will go.

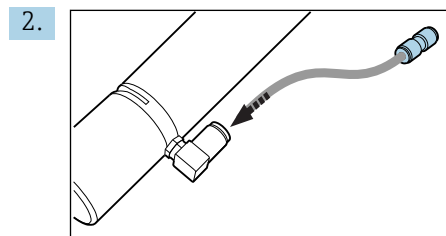


Connect the compressed air supply provided by the customer. The hose piece with hose coupling provided with the sensor can be used if desired.

SAC sensors with a gap width of 40 mm


Mount the compressed air cleaning unit prior to installing the sensor in the measuring point, or remove the sensor from the medium. Clean the sensor if necessary.

1.

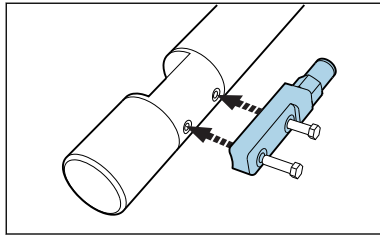

Screw the air diffuser from the accessory kit into the mounting holes behind the sensor gap, and tighten by hand as far as it will go.

2.

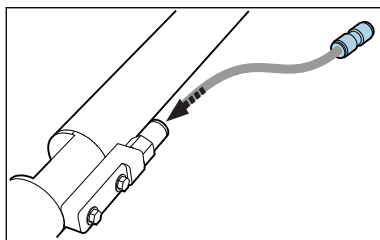

Connect the compressed air supply provided by the customer. The hose piece with hose coupling provided with the sensor can be used if desired.

5.6 Post-installation check

Put the sensor into operation only if you can answer "yes" to the following questions:

- Are the sensor and cable undamaged?
- Is the orientation correct?
- Is the sensor installed in an assembly and not freely suspended from the cable?

6 Electrical connection

⚠ WARNING

Device is live

Incorrect connection may result in injury or death

- ▶ The electrical connection may be performed only by an electrical technician.
- ▶ The electrical technician must have read and understood these Operating Instructions and must follow the instructions contained therein.
- ▶ **Prior** to commencing connection work, ensure that no voltage is present on any cable.

6.1 Connecting to the transmitter

6.1.1 Applying the cable shield to the grounding rail of the transmitter

⚠ WARNING


Sensor not grounded

If maintenance work (lamp replacement) is not performed correctly, moisture or dirt may penetrate the housing and cause an electric shock to anyone who touches it.

- ▶ To guarantee safety in your workplace, always connect the sensor's cable shield to the grounding rail of the transmitter or control cabinet.


i If possible, only use terminated genuine cables. The sensor cables must be shielded.

Cable sample (does not necessarily correspond to the genuine cable supplied)

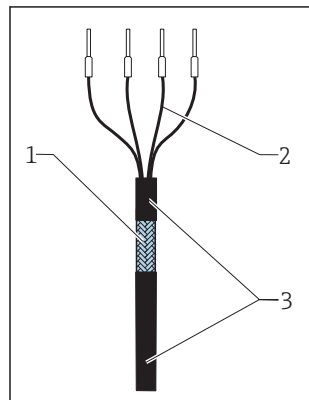


21 Terminated cable

- 1 Outer shield (exposed)
- 2 Cable cores with ferrules
- 3 Cable sheath (insulation)

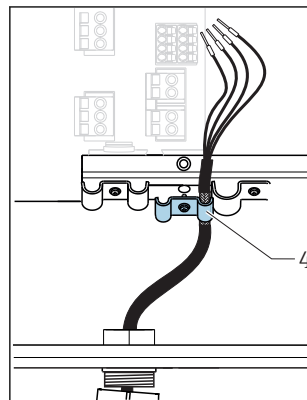

22 Inserting the cable

- 4 Grounding clip

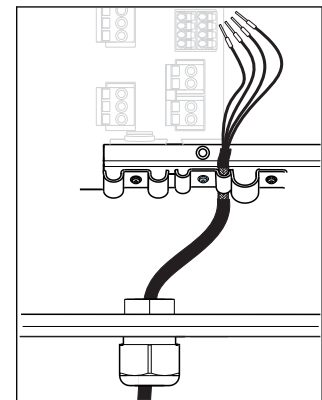

23 Tighten screw (2 Nm)

The cable shield is grounded using the grounding clamp. ¹⁾

1) Please note the instructions in the "Guaranteeing the degree of protection" section.


1. Release a suitable cable gland on the underside of the housing and remove the dummy plug from the entry.
2. Making sure the gland is facing the right direction, thread the gland onto the cable end and pull the cable through the entry and into the housing.
3. Route the cable in the housing in such a way that the **exposed** cable shield fits into one of the cable clamps and the cable cores can be easily routed as far as the connection plug on the electronics module.
4. Screw on the cable clamp and clamp the cable in place. Then tighten the screw of the cable clamp.
5. Connect the cable cores as per the wiring diagram.

- 6. Lastly, tighten the cable gland from the outside.

6.1.2 Connecting the sensor

You have the following connection options:

- via M12 connector (version: fixed cable, M12 connector)
- via sensor cable to the plug-in terminals of a sensor input on the transmitter (version: fixed cable, end sleeves)

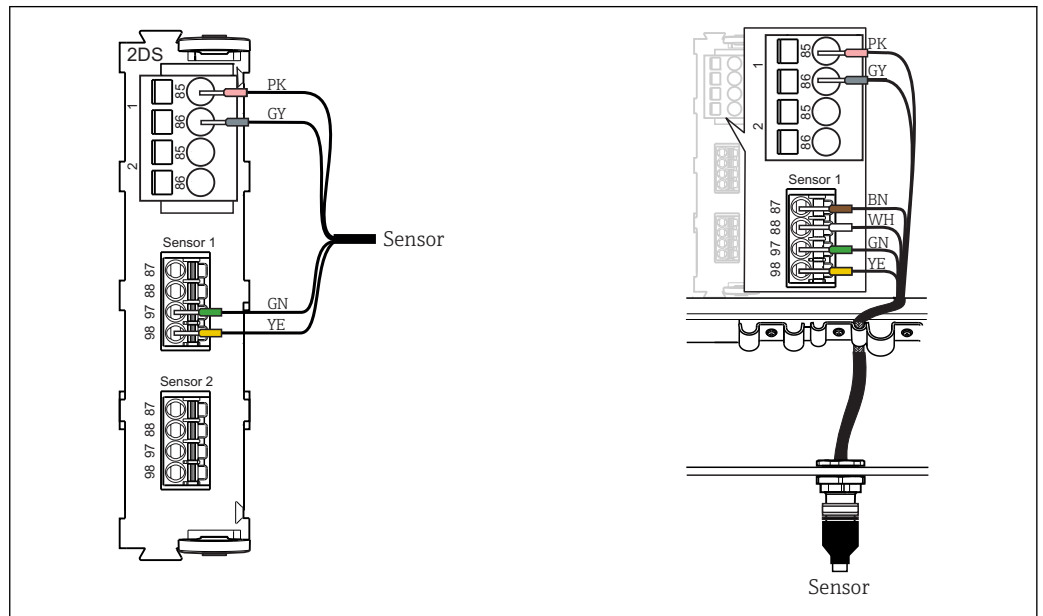

24 Sensor connection to sensor input (left) or via M12 connector (right)

The maximum cable length is 100 m (328 ft).

6.2 Ensuring the degree of protection

Only the mechanical and electrical connections which are described in these instructions and which are necessary for the required, designated use, may be carried out on the device delivered.

- Exercise care when carrying out the work.

Otherwise, the individual types of protection (Ingress Protection (IP), electrical safety, EMC interference immunity) agreed for this product can no longer be guaranteed due, for example, to covers being left off or cable (ends) which are loose or insufficiently secured.

6.3 Post-connection check

- Put the sensor into operation only if you can answer yes to all of the following questions.

Device condition and specifications	Notes
Is the outside of the sensor, assembly and cable undamaged?	Visual inspection
Electrical connection	Notes
Has cable shield been applied to grounding rail of transmitter?	Cable shield is absolutely essential
Are the installed cables strain-relieved and not twisted?	

Device condition and specifications	Notes
Is a sufficient length of the cable cores stripped, and is it positioned in the terminal correctly?	Check the fit (by pulling gently)
Are all the screws terminals properly tightened?	Tighten

7 Operation

- ▶ Verify that a representative measured value is displayed on the transmitter.
- ▶ For solids that have a tendency to form deposits, ensure that the medium is mixed sufficiently.

7.1 Calibration

Calibration is performed in the process by comparing the values to an external standard method, by calibrating with standard solutions or by using a combination of both (addition of standard).

7.1.1 Factory calibration

Nitrate sensor

The sensor is precalibrated on leaving the factory.

As such, it can be used in a wide range of clear water measurements without the need for additional calibration.

SAC sensor

The sensor is precalibrated on leaving the factory (calibrated with KHP).

Calibration to the customer process is nevertheless advantageous in the majority of cases. Reason: Organic compounds other than KHP react differently in the spectrum.

The factory calibration is based on a three-point calibration of. The factory calibration cannot be deleted and can be retrieved at any time. All other calibrations - performed as customer calibrations - are referenced to this factory calibration.


7.1.2 Types of calibration

In addition to the uneditable factory calibration, the sensor stores six other data records. Each calibration data record can have up to five calibration points.

- Single-point calibration
 - This causes a change in the slope. This type of calibration is used if the measured value only changes to a limited extent.
- Two-point calibration
 - This causes a change in the slope and zero point. This type of calibration is used if the measured value changes to a large extent.
- Multipoint calibration
 - Calibration at three or more points always causes the measuring curve to be recalculated (including zero point and slope).
- Temperature adjustment by entering a reference value

If you use one or two medium concentration values for calibration, the factory data record is recalculated using these measuring points (non-linear function) and saved as the new data record. The original factory calibration is not lost.

If you use three or more concentration values for calibration, a completely new calibration function is calculated that no longer takes the original factory calibration data record into account.

-  Give your calibration data records meaningful and useful names. For example, the name could contain the name of the application on which your data record was originally based. This makes it easier for you to distinguish between different data records.

7.1.3 Stability criterion

During the calibration process, the measured values are checked to ensure that they remain constant.

You use the stability criterion to define maximum deviations during a calibration. Only a measured value within the specified deviation is accepted.

The stability criterion includes:

- The maximum permitted deviation in temperature measurement
- The maximum permitted deviation in measured value as a %
- the minimum time frame in which these values must be maintained

If the measured value or temperature deviate more than is permitted in the specified time frame, this calibration point becomes invalid and a warning is issued.

The stability criteria are used to monitor the quality of the individual calibration points in the course of the calibration process. The aim is to achieve the best possible calibration quality in the shortest possible time frame while taking external conditions into account.

- For high-precision calibrations in the laboratory, the maximum deviation permitted in the measured value can be kept as small as possible and the time frame selected can be as long as possible..
- For calibrations in the field in adverse weather and environmental conditions, the maximum deviation permitted in the measured value can be kept suitably large and the time frame selected can be kept suitably short.

 Operating Instructions Memosens inputs BA01245C

7.1.4 Determining the reference values in the laboratory

Nitrate sensor

1. Take a representative sample of the medium.
 - ↳ Outlet water is very suitable for obtaining a representative sample. In this case, you do not have to carry out the subsequent step concerning value stabilization.
2. Take suitable measures to ensure that the process of nitrate reduction in the sample does not progress any further, such as immediate filtration (0.45 µm) of the sample as per DIN 38402.
3. Determine the concentration of nitrate in the sample using the laboratory method (for example, by colorimetric means using a cuvette test - the standard method as per DIN 38405 Part 9).

SAC sensor

1. Take a representative sample of the medium.
 - ↳ Outlet water is very suitable for obtaining a representative sample. In this case, you do not have to carry out the subsequent step concerning value stabilization.
2. Take suitable measures to ensure that the process of biological and chemical reduction in the sample does not progress any further.
3. Determine the measured values of your sample array using the laboratory method (for example, by colorimetric means using a cuvette test).

7.1.5 Nitrate sensor

Processes with nitrate values > 0.1 mg/l

1. Take a sample and determine the nitrate concentration in the laboratory.
2. Calibrate and adjust the sensor with the laboratory value.

Processes with very different nitrate values

1. At time A, take a sample with a high concentration, and measure and calibrate the sample.
2. At time B - which can be a few days after time A - take a sample with a low concentration, and measure and calibrate the second value.

Calibration with the addition of standard

If the sludge parameters tend to be constant, you can perform the calibration with a sample with a low concentration of nitrate and then add standard to the sample.

1. Take a larger sample (bucket) and analyze some of it by colorimetric means.
2. Calibrate the value of the calorimetric measurement in the sensor.
3. Add standard to the sample and determine its laboratory value.
4. Calibrate the laboratory value of the sample with added standard in the sensor.

Avoid incorrect measurements.

- ▶ Drinking water may contain higher concentrations of nitrate and is not suitable as a blank value. Use fully deionized water as a blank value.
- ▶ During calibration, make sure the sample is homogeneous.
- ▶ When calibrating, start with a low concentration and increase the concentrations gradually to prevent nitrate carryover.
- ▶ Clean and dry the sensor after a calibration. Ensure that there is no medium residue in the cuvette gap. In this way, you avoid mixing the different samples and changing the nitrate concentrations.

7.1.6 SAC sensor

General calibration steps

1. Take a sample.
2. Determine the SAC value of the sample in the laboratory.
3. Calibrate and adjust the sensor using the laboratory value.

In the SAC sensor version, the calculated variables COD, TOC, BOD and DOC can also be output if desired, in addition to the actual measured variable. These variables are based on the following ratios:

1 mg/l KHP = ~1.176 mg/l COD
1 mg/l KHP = ~0.4705 mg/l TOC
1 mg/l KHP = ~1.176 mg/l BOD
1 mg/l KHP = ~0.4705 mg/l DOC

Use other conversion factors

Sometimes the conversion factors for COD, TOC, BOD or DOC are predetermined by control bodies. In such instances, these factors can be adjusted as follows:

1. Copy the factory data record to a free data record of your choice in the SAC basic setting.

A copy is necessary because the factory data record cannot be modified. If you already have another data record, you can change its factors directly.

2. Activate the new data record. (in the **Setup** menu)
3. Set the desired factor. (in the **CAL** menu)
4. Set your device to the desired measured variable. (in the **Setup** menu)



Operating Instructions Memosens inputs BA01245C.

The SAC sensor can be calibrated for the measured variables SAC, COD, TOC, BOD and DOC.

If the sensor has been calibrated for the measured variable SAC, the conversion factors for COD, TOC, BOD or DOC can be adjusted at a later stage. If calibrated for TOC, COD, BOD or DOC, only the factor for the measured variable in use can be changed subsequently.

Avoid incorrect measurements.

- ▶ Drinking water contains many organic elements. The use of fully ionized water as a blank is also recommended here.
- ▶ During calibration, make sure the medium is homogeneous.
- ▶ Avoid any carryover of organic elements during calibration.

Processes with widely varying SAC values

Record calibration points for different operating statuses. Example of a WWTP inlet:

- After a rainy spell
- In "normal conditions"
- After a dry spell

1. Save the points in a data record of your choice and add the associated laboratory results.
2. Activate the calibration once you have set a sufficient number of points.

While this type of calibration can be more time-consuming, it allows the precise adjustment of the measurement technology to the operating conditions of the plant.

7.1.7 Calibrating and adjusting the sensor

To calibrate the sensor, use the same medium sample or sample array that you used to determine the laboratory measured values. The sample array can also be pure standard solutions.

1. Select a data record.
2. Put the sensor into the medium.
3. During calibration, make sure the medium is as homogeneous as possible.
4. Start the calibration for the measuring point.
5. If you wish to calibrate just one point:
End the calibration by accepting the calibration data.
↳ Otherwise continue with the next step.
6. Add parent solution to the sample for the 2nd measuring point and determine the measured value. The reference value is calculated from the laboratory measured value plus the added concentration.
7. Repeat the previous step as often as needed until you have the desired number of calibration points (max. 5).

To avoid incorrect calibration from carryover:

- Always go from a low concentration to a high concentration.
- Clean and dry the sensor after each measurement.
- Make sure to remove medium residue in the sensor gap and in the connection opening for the compressed air (e.g. by rinsing with the next calibration solution).

7.2 Cyclic cleaning

Compressed air is most suitable for automatic cyclic cleaning. There is a connection for compressed air on every sensor. The cleaning unit, which is supplied with the device or can be retrofitted, operates effectively at a rate of 20 l/min (5.4 US gal/min).

Type of soiling	Cleaning interval	Cleaning duration
Severe fouling with rapid buildup	5 min	10 s
Low risk of soiling	10 min	10 s


8 Diagnostics and troubleshooting

When troubleshooting, the entire measuring point must be taken into account:

- Transmitter
- Electrical connections and cables
- Assembly
- Sensor

The possible causes of error in the following table relate primarily to the sensor.

Problem	Testing	Solution
No display, no sensor reaction	<ul style="list-style-type: none"> ■ Power supplied to transmitter? ■ Sensor connected correctly? ■ Medium flow present? ■ Buildup on optical windows? 	<ol style="list-style-type: none"> 1. Connect mains voltage 2. Connect sensor correctly 3. Ensure medium is flowing 4. Clean sensor
Display value too high or too low	<ul style="list-style-type: none"> ■ Buildup on optical windows? ■ Gas bubbles present? ■ Sensor calibrated? 	<ol style="list-style-type: none"> 1. Cleaning 2. Eliminate gas bubbles 3. Calibration 4. Check data record and modify if necessary 5. Examine in workshop with test unit
Display value fluctuating greatly	Gas bubbles present?	<ol style="list-style-type: none"> 1. Eliminate gas bubbles 2. Check mounting location and select a different mounting location if necessary.

 Please observe the troubleshooting instructions provided in the Operating Instructions of the transmitter. Check the transmitter if necessary.

9 Maintenance

You must perform maintenance tasks at regular intervals.

We recommend setting the maintenance times in advance in an operations journal or log.

The maintenance cycle primarily depends on the following:

- The system
- The installation conditions
- The medium in which measurement takes place

CAUTION

Risk of injury from acids or medium, damage to clothing and equipment

- ▶ Switch off the cleaning unit before removing the sensor from the medium.
- ▶ Wear protective goggles and safety gloves.
- ▶ Clean away splashes on clothes and other objects.

9.1 Maintenance intervals

The sensor requires very little maintenance, particularly if a cleaning unit is connected. Nevertheless, maintenance must be performed at regular intervals. Schedule maintenance times in advance in an operations journal or log.

Monthly:	Visual check, clean sensor if necessary. Cleaning intervals depend on the medium.
Every two years:	Replace optical filters (manufacturer service team)
Every four years:	Replace strobe lamp (manufacturer service team)

9.2 Cleaning the sensor

Sensor fouling can affect the measurement results and even cause a malfunction.


The sensor must be cleaned regularly to ensure reliable measurement results. The frequency and intensity of the cleaning process depend on the medium.

Clean the sensor:

- As specified in the maintenance schedule
- Before every calibration
- before returning it for repairs.

Type of soiling	Cleaning measure
Lime deposits	▶ Immerse the sensor in 1 to 5% hydrochloric acid (for several minutes).
Dirt particles on the optics	▶ Clean the optics with a cleaning cloth.
Buildup on the optics	▶ Wet a cotton bud with 1 to 5% hydrochloric acid and use it to clean the optics.
After cleaning:	
▶ Rinse the sensor thoroughly with water.	

9.3 Maintenance of optical filters and strobe lamp

This work must be performed only by the manufacturer service team. Contact your Sales Center. →  32

-  Replacing the optical filter and strobe lamp also entails recalibrating and readjusting the sensor in the factory.

10 Repairs

10.1 Return

The product must be returned if repairs or a factory calibration are required, or if the wrong product was ordered or delivered. As an ISO-certified company and also due to legal regulations, Endress+Hauser is obliged to follow certain procedures when handling any returned products that have been in contact with medium.

To ensure swift, safe and professional device returns, please read the return procedures and conditions at www.endress.com/support/return-material.

10.2 Disposal

The device contains electronic components and must therefore be disposed of in accordance with regulations on the disposal of electronic waste.

Observe the local regulations.

11 Accessories

11.1 Assemblies

FlexdipCYA112

- Immersion assembly for water and wastewater
- Modular assembly system for sensors in open basins, channels and tanks
- Material: PVC or stainless steel
- Product Configurator on the product page: www.endress.com/cya112



Technical Information TI00432C

Flowfit CYA251

- Connection: See product structure
- Material: PVC-U
- Product Configurator on the product page: www.endress.com/cya251



Technical Information TI00495C

Flow assembly for CAS51D

- For small flow volumes
- Connection: hose, OD 6 mm
- Material: PVC-U
- Two brackets for CAS51D
- Order number: 71110000

11.2 Holder

Flexdip CYH112

- Modular holder system for sensors and assemblies in open basins, channels and tanks
- For Flexdip CYA112 water and wastewater assemblies
- Can be affixed anywhere: on the ground, on the capstone, on the wall or directly onto railings.
- Stainless steel version
- Product Configurator on the product page: www.endress.com/cyh112




Technical Information TI00430C

11.3 Compressed air cleaning

Compressed air cleaning for CAS51D

- Connection: 6 or 8 mm (metric) or 6.35 mm (1/4")
- Order numbers for sensor with 2 mm gap or 8 mm gap:
 - 6 mm (with 300 mm hose and 8 mm adapter)
Order No.: 71110787
 - 6.35 mm (1/4")
Order No.: 71110788
- Order numbers for sensor with 40 mm gap:
 - 6 mm (with 300 mm hose and 8 mm adapter)
Order No.: 71126757
 - 6.35 mm (1/4")
Order No.: 71126758

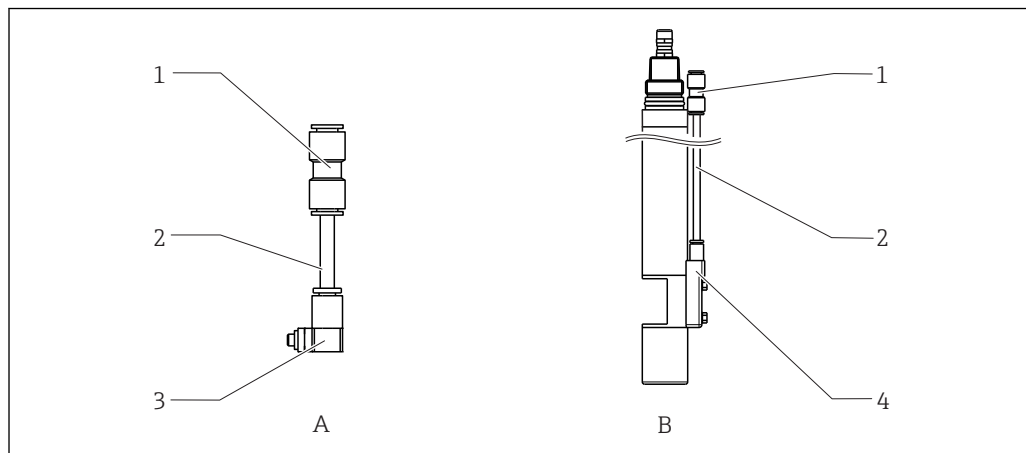

A0013263

■ 25 Compressed air cleaning for CAS51D

A Cleaning for sensors with 2 mm and 8 mm gap

B Cleaning for sensors with 40 mm gap

1 Adapter, 8 mm

2 300 mm hose ($\varnothing = 6$ mm)

3 Coupling, 6 mm or 6.35 mm ($\frac{1}{4}$ ") for 2 mm and 8 mm gap

4 Coupling, 6 mm or 6.35 mm ($\frac{1}{4}$ ") for 40 mm gap

Compressor

- For compressed air cleaning
- 230 V AC order no. 71072583
- 115 V AC order no. 71194623

11.4 Standard solutions

Nitrate standard solutions, 1 liter

- 5 mg/l $\text{NO}_3\text{-N}$, order number: CAY342-V10C05AAE
- 10 mg/l $\text{NO}_3\text{-N}$, order number: CAY342-V10C10AAE
- 15 mg/l $\text{NO}_3\text{-N}$, order number: CAY342-V10C15AAE
- 20 mg/l $\text{NO}_3\text{-N}$, order number: CAY342-V20C10AAE
- 30 mg/l $\text{NO}_3\text{-N}$, order number: CAY342-V20C30AAE
- 40 mg/l $\text{NO}_3\text{-N}$, order number: CAY342-V20C40AAE
- 50 mg/l $\text{NO}_3\text{-N}$, order number: CAY342-V20C50AAE

KHP standard solution

CAY451-V10C01AAE, 1000 ml parent solution 5 000 mg/l TOC

12 Technical data

12.1 Input

Measured values

Nitrate

NO₃-N [mg/l], NO₃ [mg/l]


SAC

SAC [1/m], COD [mg/l], TOC [mg/l], BOD [mg/l], DOC [mg/l], transmission [%]

Measuring ranges

CAS51D-**A2 (2 mm gap width)	0.1 to 50 mg/l NO ₃ -N 0.4 to 200 mg/l NO ₃ Clear water and sludge activation
CAS51D-**A1 (8 mm gap width)	0.01 to 20 mg/l NO ₃ -N 0.04 to 80 mg/l NO ₃ Clear water (for a COD (KHP) concentration of up to 125 mg/l and up to 50 FNU turbidity based on the mineral component of kaolin)
CAS51D-**C1 (40 mm gap width)	SAC 0.1 to 50 1/m COD/BOD 0.15 to 75 mg/l ¹⁾ TOC/DOC 0.06 to 30 mg/l ¹⁾ Clear water, small measuring range, drinking water
CAS51D-**C2 (8 mm gap width)	SAC 0.5 to 250 1/m COD/BOD 0.75 to 370 mg/l ¹⁾ TOC/DOC 0.3 to 150 mg/l ¹⁾ Clear water, average measuring range, drinking water, WWTP outlet, monitoring of water bodies
CAS51D-**C3 (2 mm gap width)	SAC 1.5 to 700 1/m COD/BOD 2.5 to 1000 mg/l ¹⁾ TOC/DOC 0.9 to 410 mg/l ¹⁾ Organic load in inlet, discharger monitoring, industrial processes

1) equivalent KHP

 The possible measuring range depends to a large extent on the medium characteristics.

Empirical values for typical COD measuring ranges

Inlet of municipal WWTP	0 to 4000 mg/l COD
Inlet from dairy-processing industry	0 to 10 000 mg/l COD
Inlet from chemical industry	0 to 10 000 mg/l COD

12.2 Performance characteristics

Reference operating conditions 20°C (68 °F), 1013 hPa (15 psi)

Measured error ⁶⁾	Nitrate	For 0.1 to 50 mg/l NO ₃ -N (2 mm cuvette gap): 2 % of full-scale value above 10 mg/l ±0.2 mg/l below 10 mg/l For 0.01 to 20 mg/l NO ₃ -N (8 mm cuvette gap): 2 % of full-scale value above 2 mg/l ±0.04 mg/l below 2 mg/l
	SAC	2 % of full-scale value when measuring with potassium hydrogen phthalate (KHP) as the standard

Repeatability ⁶⁾

Nitrate
At least ±0.2 mg/l NO₃-N

SAC
0.5 % of end of measuring range (for homogeneous media)

Detection limits

Nitrate

- CAS51D-AAA1
0.003 mg/l NO₃-N
- CAS51D-AAA2
0.013 mg/l NO₃-N

SAC
In relation to the standard potassium hydrogen phthalate (KHP):

- CAS51D-AAC1
0.045 mg/l COD
- CAS51D-AAC2
0.3 mg/l COD
- CAS51D-AAC3
1.5 mg/l COD

Detection limits

Nitrate

- CAS51D-AAA1
0.01 mg/l NO₃-N
- CAS51D-AAA2
0.043 mg/l NO₃-N

SAC
In relation to the standard potassium hydrogen phthalate (KHP):

- CAS51D-AAC1
0.15 mg/l COD
- CAS51D-AAC2
1.0 mg/l COD
- CAS51D-AAC3
5.0 mg/l COD

Long-term drift

Nitrate
Better than 0.1 mg/l NO₃-N over one week

6) The measured error includes all of the sensor's and transmitter's uncertainties (measuring chain). It does not include any uncertainties resulting from the reference material or from any necessary adjustment.

SAC

Better than 0.2 % of end of measuring range over one week


12.3 Environment

Ambient temperature range	-20 to +60 °C (-4 to 140 °F)
Storage temperature	-20 to +70 °C (0 to 160 °F)
Degree of protection	IP 68 (1 m (3.3 ft) water column over 60 days, 1 mol/l KCl)

12.4 Process

Process temperature	5 to 50 °C (41 to 122 °F)
Process pressure (absolute)	0.5 to 10 bar (7 to 145 psi) absolute
Minimum flow	No minimum flow required.

12.5 Mechanical construction

Dimensions	→  6	
Weight	Approx. 1.6 kg (3.53 lbs) (without cable)	
Materials	Sensor	Stainless steel 1.4404 (AISI 316 L)
	Optical windows	Quartz glass
	O-rings	EPDM
Process connections	G1 and NPT 3/4"	

Index

A

Accessories	33
Ambient temperature range	37
Approvals	12

C

Cable shield	24
Calibration	
Factory calibration	26
Certificates	12
Check	
Connection	25
Installation	23
Cleaning	30, 31
Cleaning unit	22
Cross-interference	
Nitrate	9
SAC	10
Cyclic cleaning	30

D

Degree of protection	37
Designated use	4
Detection limits	36
Device description	6
Diagnosis	30
Dimensions	6
Disposal	32

E

Electrical connection	24
Ensuring the degree of protection	25

F

Factory calibration	26
Flow operation	17

I

Immersion operation	15
Incoming acceptance	11
Input	35
Installation	13
Installation instructions	14
Interpreting the order code	11

L

Long-term drift	36
---------------------------	----

M

Maintenance	31
Maintenance intervals	31
Manufacturer's address	12
Materials	37
Maximum measured error	36
Measured values	35
Measuring principle	8
Measuring ranges	35

Mechanical construction	37
Minimum flow	37
Mounting location	13

N

Nameplate	11
Nitrate	9

O

Operating principle	8
Operation	26
Optical filters	31
Orientation	13

P

Performance characteristics	36
Post-connection check	25
Post-installation check	23
Process connections	37
Process pressure (absolute)	37
Process temperature	37
Product identification	11
Product page	11

R

Reference operating conditions	36
Repairs	32
Repeatability	36
Return	32

S

SAC	9
Safety instructions	4
Scope of delivery	12
Sensor	14
Cleaning	31
Connecting	25
Design	6
Dimensions	6
Stability criterion	27
Storage temperature	37
Strobe lamp	31
Symbols	3

T

Technical data	35
Troubleshooting	30

U

Use	4
---------------	---

W

Warnings	3
Weight	37
Wiring	24

www.addresses.endress.com
